









ENSURE THAT THE CHANNEL SELECTOR SWITCH ON THE AMPLIFIER IS SET TO THE 'CENTRE' OFF POSITION. OTHERWISE THE FOOTSWITCH WILL NOT WORK AS INTENDED.